



INSTRUCTIONS

BUTANE OUTDOOR HEATER

ITEM #193

LOADING/ LIGHTING/ STORAGE INSTRUCTIONS

LOADING INSTRUCTIONS

1. Make sure the fuel knob is in the off position.
2. Gently place your finger in the hole on the fuel door and open the door.
3. Raise the black fuel canister release lever to the top (unlocked) position.
4. Carefully place the butane canister into place being careful to align the top of the fuel canister with the gas orifice of the stove.
5. Lower the black fuel canister release lever to the lower (locked) position. This will hold the fuel canister firmly in place.

LIGHTING INSTRUCTIONS

1. With one hand turn the fuel knob all the way toward the ON position until you hear a "CLICK". Use your other hand to pull the ring out while turning the fuel valve to the igniter position. The click you hear is the electronic self-igniter sparking. The spark will ignite the fuel vapors.
2. Once the heater element has been lit, you may adjust the fuel knob to the desired heat output.
3. **BE CAREFUL** – This heater gets hot! Do not place it near any flammable surfaces.
4. **BE SAFE - DO NOT USE INDOORS** – This heater is for outside use only!

STORAGE INSTRUCTIONS

1. Turn the fuel valve to the OFF position and let the heater cool for 15 minutes.
2. Raise the black fuel canister release lever to the top (unlocked) position. This will release the fuel canister
3. Open the fuel door and remove the fuel canister.
4. Shut the fuel door.
5. **NEVER** store your stove with the butane canister installed.