

STANSPORT® TENT TIPS

Item No. 2100

Olympus Backpackers 3 Person Dome Tent With Rain Fly

Thank you for taking Stansport outdoors. We hope you enjoy your new tent and that it will give you many years of camping pleasure. We encourage you to read and understand each step of the set-up instructions prior to working with the tent. **DO NOT APPLY EXCESSIVE FORCE TO ANY PART OF THE TENT POLES DURING SET UP.**

WATERPROOFING YOUR TENT

STANSPORT Tents are made from coated water repellent fabrics. However, the sewing process necessary in all tent fabrication, can cause water leakage where the sewing needles have perforated the fabric in the seams. Without treatment, the tent will leak. Every new tent needs to be seam sealed to make it water tight. Seam sealer can be located at your local outdoor outfitter or camping store. We recommend sealing the outside of the floor and rain-fly twice and the underside of the fly and the inside floor once. When finished, let the tent stand and dry for a 6 to 12 hours before putting it away.

1) BEGINNING SET UP

Assemble the 2 sets of shock-corded poles. Now, spread the tent out on the ground until it is opened completely. Remove the rain-fly and set is aside.

Locate a pin and ring set at one of the corners. Now, take any one of the two poles arcs and place the aluminum ferrule (at the end of the pole) onto the pin. Following the nylon clips across the tent in a straight line, locate the pin and ring set directly opposite the one your pole is connected to. Now place the other end of the pole arc over the pin. Repeat this procedure with the other remaining pole arc. Once both pole arcs are attached and in place you are now ready to lift them up and begin connecting the clips.

2) SETTING UP THE TENT

Locate the front door and unzip it so that the door is open. Now, locate the first nylon clip along the seam that the pole arc follows and clip it to the pole. Continue following the tent seam, connecting clips to the tent pole as you go. Once the majority of the clips are attached, the poles will be easier to manage. Adjust any clips that look out of place. Note: If you are alone, set up will take more time and patience.

3) RAIN FLY INSTALLATION

Place the rain-fly on top of the tent. Locate the four small black nylon loops (see diagram) that the rain-fly will connect to. They are sewn between the nylon webbing holding the first four clips below the edge of the rain-fly. They may be hard to detect at first. Once located, push the nylon loop out with your finger. When the loops are exposed connect the four bungee-cord hooks to the small nylon loops on the tent body.

4) ADDITIONAL INFORMATION


Make sure to stake down the tent (with the tent stakes included) in windy weather, or if you anticipate afternoon winds coming up while you are away from your campsite. Always place your tent a safe distance from your campfire — unstaked tents placed upwind of the fire can be blown into the fire. Tents placed downwind of the fire are often showered with tiny sparks that can burn holes in the lightweight fabrics of the tent. We recommend that you practice setting up your tent at home before taking it into the wilderness.

5) WARNING

STANSPORT tent fabrics are flame retardant treated per CPAI-84. However, for your safety, we recommend that no open flame be used in or near your tent.



RAIN-FLY

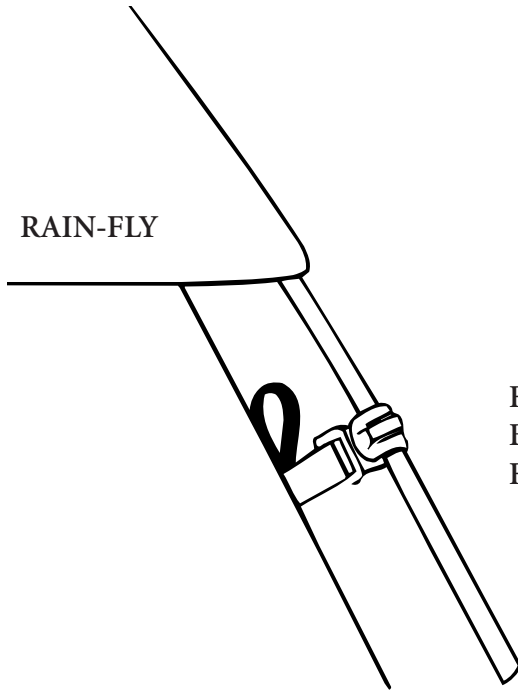

FIRST CLIP
BELOW EDGE OF RAIN-
FLY

RAIN-FLY LOOP

